

TABLE OF CONTENTS:

SECTION.....PAGE

TRANSPORT AND STORAGE

 CAUTION

PUMP INSTALLATION

INSTALLATION

Installation Configuration

1.


PUMP OPERATION

Priming and Filling

SHAFT SEALING SETTINGS AND ADJUSTMENTS



PENTAIR AURORA* MODEL 382B CC

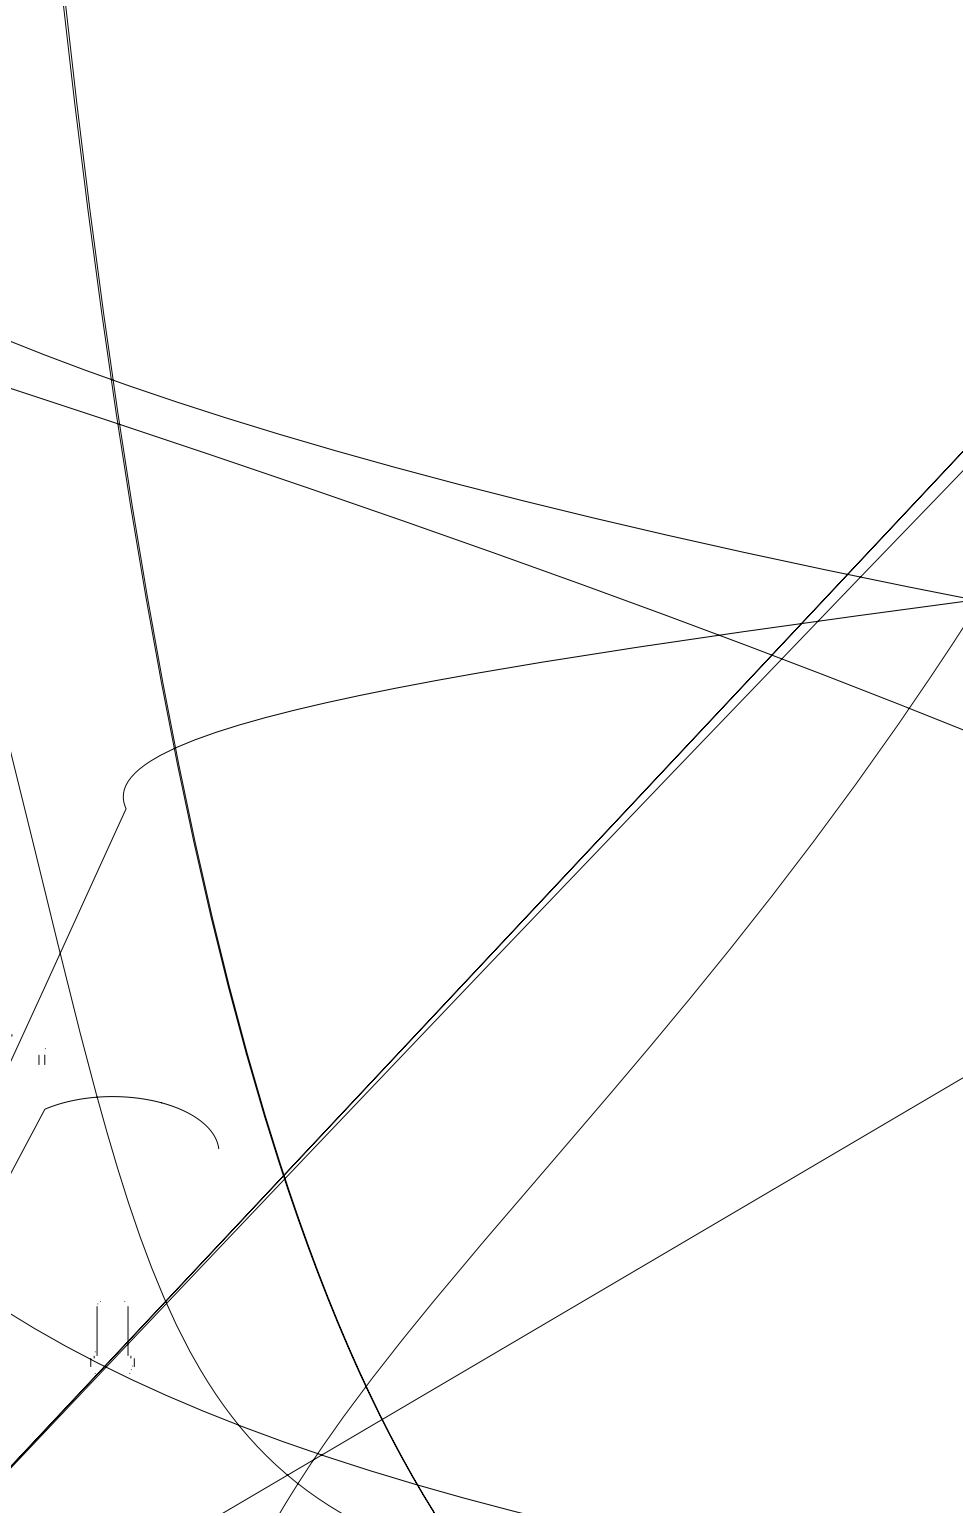



800 Airport Road | North Aurora, Illinois 60542 | Ph: 630.859.7000 | pentair.com

Third party registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, Pentair reserves

AU1064 (09/27/19) ©2019 Pentair. All Rights Reserved.