

# REPAIR PARTS INDEX

[pentair.com](http://pentair.com)

# TABLE OF CONTENTS:

---

<b>DESCRIPTION</b> .....	
Exploded View with Piece Numbers .....	3
<b>PUMP SIZE</b> .....	
1.5 x 1.5 x 7 through 6 x 6 x 7A Part Numbers .....	4
1.5 x 1.5 x 9.5 through 8 x 8 x 9.5A Part Numbers .....	5
2 x 2 x 11 through 8 x 8 x 11A Part Numbers.....	6
3 x 3 x 13.5 through 10 x 10 x 13.5A Part Numbers.....	7
Standard Limited Warranty .....	8

**NOTE:** To determine when to use **(S)**, **(L)** or **(XL)** parts, in addition to the pump size, it is also necessary to have the motor frame.

**MOTOR FRAMES:**

- Motor Frames 143–215 use (S) parts.
- Motor Frames 254–326 use (L) parts.
- Motor Frames 364–449 use (XL) parts.

**Notice:** Read and understand the pump and motor instructions available in the Pentair Fairbanks Nijhuis® 1590 In-Line Closed Coupled Pump Installation and Operational Manual before attempting to install, disassemble or repair the pump.







# 11 INCH PUMP PART NUMBERS

---





## NOTES

---

---

---

---

---

---

---

---

